

1

When the water in the kettle starts boiling, the kettle will turn into keep-warm mode. When this function for 4 hours, the kettle will automatically turn off. The keep-warm mode is suitable for high temperature, point and then it turns off automatically. It remains in this way turns off automatically. The keep-warm mode is suitable for low temperature user.

[illegible]

1. Take the samovar out, the first mounting base then fill water into it. Its capacity for the filled water must be less than the maximum level, the water is possible to be spill out from the top when boiling.
2. Place glass teapot onto the samovar fill, then press button to switch power on.
3. Press the power button and the samovar starts to work.
4. After the water is boiled, the program will switch to keep warm automatically.
5. The keep warm process will last for 4 hours, after that it will cut off automatically to avoid boil dry.
6. After some time warm-keeping, there is much steam under the steam wiper and pull the teapot at one direction at once or some times until the steam is wiped.
- (Note: When you do not use the samovar for a long time, it's recommended to drain all water to avoid bacterial growth.

Dry-Ball Protection

If you operate the samovar accidentally at the state of without water, protection against dry boiling will automatically cut off the power. If you need to boil water under this situation, please fill water into the samovar after the samovar is cooled down.

Clean and Maintenance

Unplugging the power cord from the socket and then pull out the tail socket from the base before cleaning. DO not immerse the samovar, power plug into water or moisten them to avoid electric

4